

Klausdorfer Weg 163, 24 148 Kiel – Germany

Tel.: +49 (0) 431 66 111-0, Fax: +49 (0) 431 66 111-28

E-mail: info@podszuck.eu

Internet: www.podszuck.eu

PODSZUCK

Maintenance Instructions
for
single leaf sliding doors
(with and without personal door class A-60)

Following control and service to be carried out every second month (external types fortnightly).

1. Check that all bolts on trolleys and other carrying parts are tightened.
2. Check that guides at bottom are not damaged or obstructions in runway.
3. Check that top rail is free from dirt and grease it.
4. Check that neoprene seals are not damaged or loose.
5. Check that pneumatic brake works properly during open and closing action if the door.
6. Clean and grease moving parts.
7. Check lock function.
8. Check that counter weight wire and connection are not damaged.
9. Check bolt back magnet function.